

The numbers below are the weight required to strike and sustain middle C on each keyboard.

Yamaha DGX-660	72 grams
Casio CGP-700	75 grams
Yamaha Montage 8	75 grams
Kawai MP11SE	76 grams
Casio S3000	77 grams
Roland FP-90	77 grams
Roland FP-60	78 grams
Roland RD 2000	79 grams
Roland FP-30	81 grams
Roland LX706	81 grams
Dexibell VIVO S9	82 grams
Casio S350	83 grams
Nord Stage 3	83 grams
Roland RP501R	83 grams
Korg Kross 2-88-MB	84 grams
Kurzweil PC4	84 grams
Yamaha P-45	84 grams
Kawai ES110	85 grams
Roland RP102BK	85 grams
Korg SV2	86 grams
Nord Grand	87 grams
Korg Grandstage 88	88 grams
Korg Kronos Titanium	89 grams
Nord Piano	92 grams
Yamaha CP88	93 grams
Yamaha S6X Acoustic Grand Piano	93 grams
Kurzweil SP6	96 grams
Yamaha P515	96 grams
Yamaha Clavinova CSP170	97 grams
Yamaha P-125	97 grams
Dexibell VIVO S7 Pro	100 grams
Yamaha Clavinova CLP675	100 grams
Yamaha Clavinova CLP685	101 grams
Yamaha Clavinova CVP805	102 grams
Nord Stage 3 Compact	103 grams
Yamaha Clavinova CLP625	105 grams
Yamaha Clavinova CVP701	105 grams
Hammond SK1	125 grams